

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------|------------------------|
| 4 x Polyurethane bushes | 4 x Steel washers |
| 2 x Stainless steel sleeves | 2 x Steel outer shells |
| 1 x Grease | |

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

 
All fasteners must be tensioned to manufacturer's torque settings.

 


 
Fitting Instructions:

 
1. Remove the original bush from the arm.
2. Clean any dirt and corrosion from the bore in the arm. Remove any sharp edges from the bore of the arm.
3. Press steel outer shell into bore of arm, pressing on the machined face with the smaller diameter lip side leading. Press till the larger diameter lip sits flush on machined face of arm.
4. Fit each polyurethane bush into bore of the shell with the lip faces facing outwards.
5. Apply some provided grease to the bore and mounting faces of each bush. Fit the stainless steel sleeve into bush.
6. Place washers flush against top face of polyurethane bushes.
- 7 Re-fit arm to the car. Tension all hardware to manufacturers recommended torque settings.

Steel washer → 

Stainless steel sleeve → 

Polyurethane bush → 

Steel shell → 

Polyurethane bush → 

Steel washer → 