

**PART NUMBER** 

PFF5-1602

**DESCRIPTION** 

# FRONT ARM OUTER BUSH

### **INSTALLATION GUIDE**

## Contents (parts per pack):

2 x A Polyurethane Bushes 2 x B Polyurethane Bushes

2 x Stainless Steel Sleeves 4 x Washers

1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- -all work to be carried out by a licensed technician;
- -all safety precautions adhered to;
- -wheel alignment to be checked and adjusted as required after any suspension work.
- -All fasteners must be tensioned to manufacturer's torque settings.

# CONTROL STATE OF THE STATE OF T

### **Fitting Instructions:**

- 1. Remove the original bush including its outer shell from the arm as shown in Fig 1.
- 2. Clean any dirt and corrosion from the bore in the arm, removing any sharp edges or burrs with a rounded file.
- 3. Push the A bush into the arm facing towards the front of the vehicle as shown in Fig 2. The chamfered shape of the bush will fit the internal contour of the arm.
- 4. Push the B bush into the other side of the arm.
- 5. Apply some of the supplied grease to the bore of the bush and insert the sleeve until flush.
- 6. Prior to presenting the arm to the vehicle for re-assembly, add one of the supplied washers to the threaded end of the anti-roll bar.
- 7. Refit the arm to the vehicle, add the additional washer to the nut side of the bush and tension all hardware to the manufacturer's recommended torque settings.

