

# POWERFLEX®

PART NUMBER

## PFF12-502

DESCRIPTION

### FRONT LOWER WISHBONE REAR BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

2 x Polyurethane Bushes    1 x Grease  
2 x Zinc Plated Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

2. Remove the original bush from the bracket and arm and remove the outer shell.
3. Clean any dirt and corrosion from the bore of the bracket and end of the arm.
4. Press the metal sleeve into the bracket from the front face until it sits against the aluminium bracket
6. Insert the polyurethane bush into the sleeve, with the chamfered edge getting pushed in first.

**Tip: It may be necessary to apply some washing up liquid onto the bush to ensure fitting**

7. Refit the bracket back onto the arm and the wishbone back onto the car.
8. Tighten all hardware to the recommended torque settings.

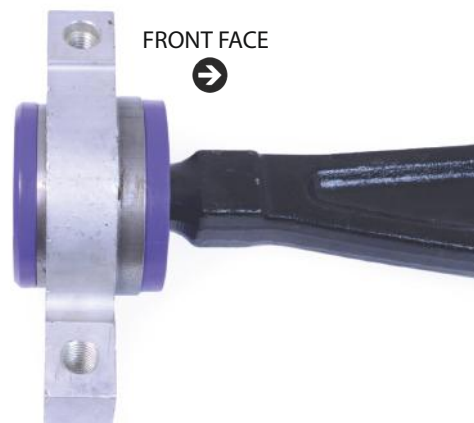


Figure 1 - plan view showing how the two parts fit in together in the bracket and arm

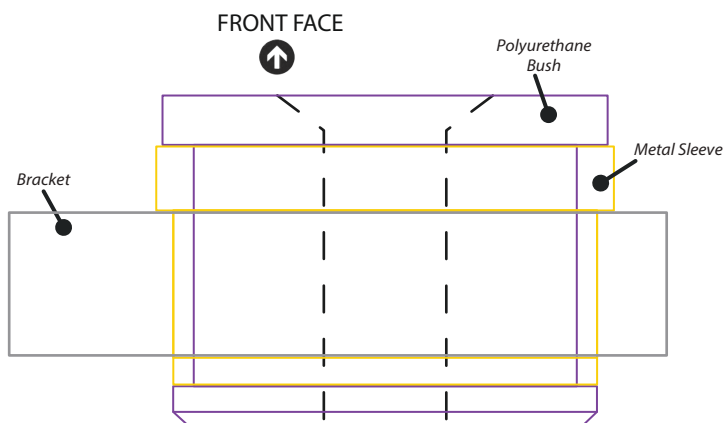


Figure 2 - Cross section view showing how the two parts fit in together



Figure 3 - fitted image showing the polyurethane bush and the metal sleeve inside the bracket and arm