



PART NUMBER

**PFF85-265**

DESCRIPTION

**FRONT WISHBONE REAR BUSH**

INSTALLATION GUIDE

**Contents (parts per pack):**

2 x Polyurethane Bushes

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



**Fitting Instructions:**

1. Remove the original bush and clean away dirt and corrosion from the vacant hole.
2. File away any sharp edges using a rounded file.
3. Apply some washing up liquid to the bore of the arm, and chamfered edge first, press the Polyurethane Bush into the arm until it sits flush within the bore.
4. Refit the wishbone to the subframe, remembering to tension to the manufacturer's recommended torque settings.
5. Test drive.



**TOP OF CAR**

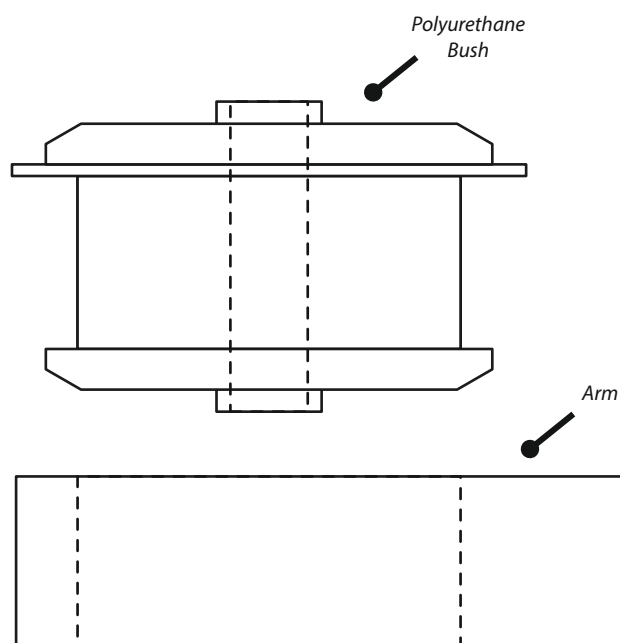


Figure 1