

# POWERFLEX®

PART NUMBER

## PFR3-1112

DESCRIPTION

### LOWER ARM REAR BUSH

#### INSTALLATION GUIDE

##### Contents (parts per pack):

4 x PFR3-1112 Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



##### Fitting Instructions:

1. Remove the original bush from the arm, remembering to clean away any dirt and corrosion.
2. File away any sharp edges using a rounded file.
3. Insert the PFR3-1112 Bushes into each end of the vacant hole, until they sit flush within the bore.
4. Apply some of the supplied grease to the bore of the bushes, and insert the Stainless Steel Sleeve into the bore until it sits flush.

**Note: Take note of the orientation of the sleeve in Figure 1, ensuring the sleeve is facing the back of the car.**

5. Refit the arm to the subframe, remembering to tension all hardware to manufacturers recommended torque settings.

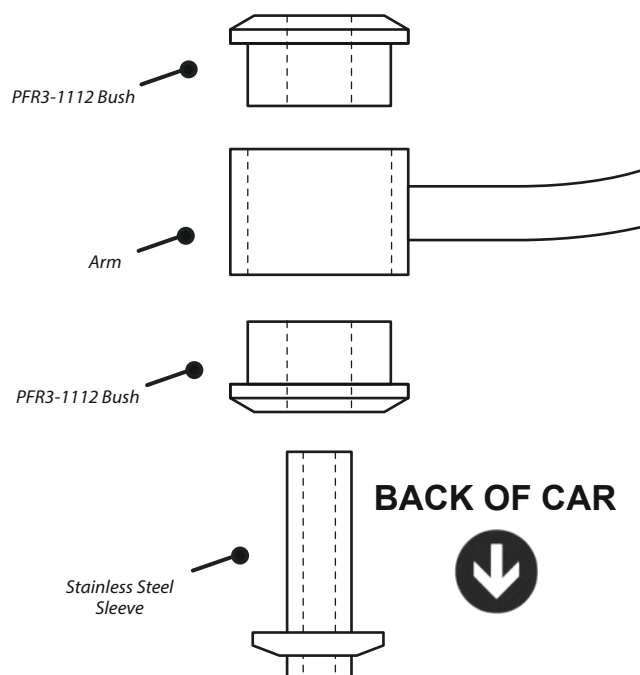


Figure 1